
 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 [ ]/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [ <> ]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto
[.≡]/Mix	+   Shift + Text /
[≡♦]/Size	Zoom / Size
[≡i]/Index	Info / Angle
[≡x]/Update	Rec / Rec Mode
[≡o]/Time	Pause / Step / Freeze
[≡?]/Reveal	Play / Slow
[≡+]/Hold	Stop / Hold
[■]/PIP	Display / Media
[:■]/Input	+  Shift + AV / Input / RDS
[/■]/Swap	+  Shift + Back / Return
PIP PR+	+  Shift + CH+ /
[-■]/Position	+  Shift + Display / Media
[≡.]/Mode	+  Shift + Smart / List

Original	Replacement
*(Down)	+  Shift + Down
PIP PR-	+  Shift + CH- /

