

 


 



 


 

 















Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Bluetooth	 Shift + 9
 Disc Menu	 D.Menu / Top
 Up	 Up
 Top Menu	 Shift + D.Menu / Top Menu
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 ≡	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Eject	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >I	 >>I / Preset+
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 III	 Shift + 3
 Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4





Original		Replacement		Original	Replacement
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Subtitle		Subtitle / EQ		
	0		0		
	Audio		Audio / Lang I/II		

