

 



 













 

 



 

 

 

 
 




Original	Replacement
	 Power
	 Shift + 2
	 Shift + 3
	 TV/Radio /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Guide / EPG / -/--
	 Setup / OPT /
	 Shift + Setup / OPT / Tools
	 Up
	 Down
	 Right
	 Left
	 OK

Original	Replacement
	 Back / Return
	 Fav / Marker / PC
	 Info / Angle
	 << / Tune-
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 >> / Preset+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Picture / Format





Original		Replacement		Original		Replacement	
NET TV	Net TV	SHIFT + TV 1	Shift + 1				
TELETEXT	Teletext	GOTO TEXT	Text / Goto				
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - SAT 0	0				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
SOURCE	Source	RDS AV INPUT	AV / Input / RDS				
AMBILIGHT	Ambilight	LIST SMART	Smart / List				

