 


 






 
 


 



















 



 



 







 

 

 





 





Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	0		0		CH -		CH- / Page-
	1		1		Mute		Mute / Dimmer
	2		2		LT		Info / Angle
	3		3		Store		AV / Input / RDS
	4		4		Back		Back / Return
	5		5		Back		Exit / Cancel / Clear
	6		6		Tuner A/B		Display / Media
	7		7		#		Smart / List
	8		8		< / West		I<< / Preset-
	9		9		< / West		<< / Tune-
	Up		Up		SAT		Shift + 0
	CH +		CH+ / Page+		> / East		>>I / Preset+
	Left		Left		> / East		>> / Tune+
	Menu		Menu / Home				
	Menu		OK				
	Right		Right				

