 


 

 


 
 

 
 
 

 

 
 
 

 






 



 


 
 

 

 





 










Original	Replacement	Original	Replacement
	Power		Mute
	1		Mute
	2		TV
	3		TV/R
	4		Back
	5		Back
	6		Menu
	7		Menu
	8		Up
	9		Down
	0		Right
	AV		Left
	-/--		Ok
	P +		Dual
	P -		Text
	Vol +		Text
	Vol -		Info
			Play / Pause
			Play / Pause
			Pause
			Stop
			Stop
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec
			Rec



