



Original	Replacement
 Mute	 Mute / Dimmer
 [<>]	 Picture / Format
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 Swap	 Back / Return
 Swap	 D.Menu / Top
 PC	 Fav / Marker / PC

Original	Replacement
 TV	 TV/Radio /
 Menu	 Menu / Home
 Text / Mix	 Text / Goto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ i ]	 Info / Angle





Original	Replacement
[?]	<b>LIST SMART</b> Smart / List
[+]	<b>SIZE ZOOM</b> Zoom / Size
[♦]	<b>MEDIA DISPLAY</b> Display / Media
[≡x]	<b>SURROUND</b> Eject / Surround
[≡]	<b>GUIDE EPG</b> Guide / EPG / -/-
[ ]	<b>EQ SUBTITLE</b> Subtitle / EQ
♪	<b>TITLE SOUND</b> Sound / Title

Original	Replacement

