



Original	Replacement	Original	Replacement
 Standby	 Power	 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Subtitle	 Subtitle / EQ
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Ok	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Ch.List	 Smart / List
 7	 7	 FAV	 Fav / Marker / PC
 8	 8	 Exit/Cancel	 Exit / Cancel / Clear
 9	 9	 CH+/Page+	 CH+ / Page+
 Display	 Display / Media	 Vol+	 Vol+
 0	 0	 S.Mode	 Sound / Title
 Recall	 Back / Return	 Vol-	 Vol-
 Setup	 Setup / OPT /	 P.Mode	 Picture / Format
 EPG	 Guide / EPG / -/--	 CH-/Page-	 CH- / Page-
 Source	 AV / Input / RDS	 Red/Goto	 Red / Netflix / Search





Original	Replacement
Green/A-B	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
Record	Rec / Rec Mode
Rec. List	Shift + Rec / Rec Mode
TV/Radio	TV/Radio /
Scaler	Menu / Home
Play	Play / Slow
Pause/Reveal	Pause / Step / Freeze
Stop/Index	Stop / Hold
I<<	I<< / Preset-
<</Mix	<< / Tune-
>>I	>>I / Preset+
>>	>> / Tune+
Text	Text / Goto
S.Page /	D.Menu / Top
Hold/Title	Shift + Stop / Hold

Hold

Original	Replacement
Zoom-	Shift + Zoom /
Zoom+/Size	Zoom / Size
Eject	Eject / Surround
Sleep	Sleep / Timer

