




























 
 












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH List	 Smart / List
 0	 0
 Return/Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Home	 D.Menu / Top
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+
 Info	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 PR-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Nicam I/II	 Audio / Lang I/II
 Text	 Text / Goto
 AD/Subpage	 Sound / Title





	Original	Replacement		Original	Replacement
	FAV/Size	Fav / Marker / PC			
	FAV/Size	Zoom / Size			
	Quick/Hold	Display / Media			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Play	Play / Slow			
	Pause/Index	Pause / Step / Freeze			
	<</Reveal	<< / Tune-			
	>>/Mix	>> / Tune+			
	Stop/Cancel	Stop / Hold			

