



Original	Replacement
Standby/On	Power
1/5Beam	1
2/ST+3Beam	2
3/3Beam	3
4/Stereo	4
5/Target	5
6	6
7/Music	7
8/Movie	8
9/Vol Mode	9
0/Sports	0
+10/Off	Guide / EPG / -/--
Surround	Eject / Surround
Up	Up
Down	Down
Right	Right
Left	Left

Original	Replacement
AUX	Smart / List
Enter	OK
Menu	Menu / Home
Return	Back / Return
Test	Text / Goto
CH Level	Info / Angle
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
(o)	Sound / Title
Input Mode	AV / Input / RDS
Sleep	Sleep / Timer
Power AUX	Shift + Power
1 AUX	Shift + 1
2 AUX	Shift + 2
3 AUX	Shift + 3
4 AUX	Shift + 4





Original	Replacement
TARGET 5 5 AUX	SHIFT + TAPE 5 Shift + 5
6 6 AUX	SHIFT + TUNER 6 Shift + 6
MUSIC 7 7 AUX	SHIFT + AUX - HDD 7 Shift + 7
MOVIE 8 8 AUX	SHIFT + USB 8 Shift + 8
VOL MODE 9 9 AUX	SHIFT + BLUETOOTH 9 Shift + 9
SPORTS 0 0 AUX	SHIFT + HDMI - SAT 0 Shift + 0

Original	Replacement





Original	Replacement	Original	Replacement
Power	Power	Input 1	Smart / List
1	1	Input 2	Display / Media
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
CH+	CH+ / Page+		
CH-	CH- / Page-		
Tv Vol+	Vol+		
Tv Vol-	Vol-		
Tv Input	AV / Input / RDS		
Tv Mute	Mute / Dimmer		

Original	Replacement	Original	Replacement
Power	Power	Input 1	Smart / List
1	1	Input 2	Display / Media
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
CH+	CH+ / Page+		
CH-	CH- / Page-		
Tv Vol+	Vol+		
Tv Vol-	Vol-		
Tv Input	AV / Input / RDS		
Tv Mute	Mute / Dimmer		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Menu	 Menu / Home
 Return	 Back / Return
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 STB	 Shift + 3





Original	Replacement	Original	Replacement
Power	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Play	Play / Slow		
<<	<< / Tune-		
>>	>> / Tune+		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		

