 

 

 

 

 

 

 

 



 

 



 













Original	Replacement
 Power	 Power
 SD/HC	 Shift + Display / Media
 Tv Input	 Shift + AV / Input / RDS
 AV Input	 AV / Input / RDS
 Aspect	 Picture / Format
 Menu	 Menu / Home
 Cast Viera	 Smart / List
 Direct Tv Rec	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 [≡i]/Index	 Eject / Surround
 Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement	Original	Replacement
7	7	>> Tv	>> / Tune+
8	8	>> Tv	>>   / Preset+
9	9	Stop Tv	Stop / Hold
Mute	Mute / Dimmer	Pause/Step Tv	Pause / Step / Freeze
0	0		
OIO	Audio / Lang I/II		
Vol+	Vol+		
PR+	CH+ / Page+		
Vol-	Vol-		
PR-	CH- / Page-		
Power Down TV	Shift + Power		
Rec Tv	Rec / Rec Mode		
Programme Down	Shift + CH- /		
Programme Up	Shift + CH+ /		
<< Tv	<< / Tune-		
<< Tv	<< / Preset-		
Play Tv	Play / Slow		



