
 



 


 
 
 

 
 
 
 
 
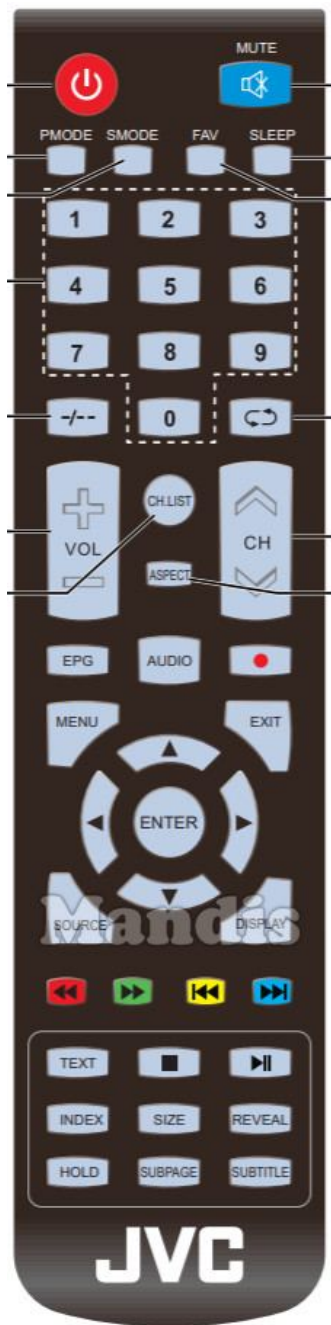


Original	Replacement
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / +/-
	0

Original	Replacement
	Recall
	Vol+
	CH.List
	CH+ / Page+
	Vol-
	Shift + Picture / Format
	CH- / Page-
	Guide / EPG / +/-
	Audio / Lang I/II
	Rec / Rec Mode
	Menu / Home
	Exit / Cancel / Clear
	Up
	Left
	OK
	Right
	AV / Input / RDS





Original	Replacement
	Down
	Display / Media
	Red / Netflix / Search
	<< / Tune-
	Green / APP / Repeat
	>> / Tune+
	Yellow / YouTube / Repeat
	I<< / Preset-
	Blue / Prime Video / Random
	>>I / Preset+
	Text / Goto
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	D.Menu / Top
	Zoom / Size
	Shift + Back / Return

Original	Replacement
	Hold
	Subpage
	Subtitle
	Shift + Stop /
	Setup / OPT /
	Subtitle / EQ

