

 







































 



 
 
 
 





 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format

Original	Replacement
 Input	 AV / Input / RDS
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Menu /
	 Setup / OPT /
	 Display / Media
	 Text / Goto
	 Play / Slow
	 Guide / EPG / -/--
	 I<< / Preset-
	 Stop / Hold
	 Rec / Rec Mode
	 Zoom / Size
	 Pause / Step / Freeze
	 << / Tune-
	 TV/Radio /
	 >> / Tune+

Original	Replacement
	 Smart / List
	 Subtitle / EQ
	 >>I / Preset+
	 Eject / Surround

