
 
 
 
 






Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 World/Internet	 Smart
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 i	 Info
 Photo/Music/Cam	 Media
 Guide	 Guide
 */O	 Format
 */Q	 3D





	Original	Replacement	Original	Replacement
	[≡]/Text	 Text		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		
	Lang	 Dual		
	[≡].	 Subt		
	[-O-]	 Eject		
	<<	 <<		
	Pause	 Pause		
	>>	 >>		
	Rec	 Rec		
	Play	 Play		
	Stop	 Stop		

