



| Original | Replacement |
|---|---|
|  |  Mute / Dimmer |
|  |  Fav / Marker / PC |
|  |  Power |
|  |  Info / Angle |
|  |  Smart / List |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  Stop / Hold |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  Subtitle / EQ |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Display / Media |

| Original | Replacement |
|---|--|
|  |  AV / Input / RDS |
|  |  0 |
|  |  Guide / EPG / -/-- |
|  |  Shift + Text / |
|  |  Text / Goto |
|  |  CH+ / Page+ |
|  |  Up |
|  |  Menu / Home |
|  |  Left |
|  |  Vol- |
|  |  OK |
|  |  Right |
|  |  Vol+ |
|  |  Back / Return |
|  |  CH- / Page- |
|  |  Down |
|  |  Setup / OPT / |





| Original | Replacement |
|---|---|
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow / Timer |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Violet |  Shift + Red / Netflix / |
|  Picture |  Picture / Format |
|   |  Sound / Title |
|  PP |  Exit / Cancel / Clear |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

