

 



 































 








 



 














 





| Original | Replacement | Original | Replacement |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|  Power |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Exit |  Exit / Cancel / Clear |
|  Nicam/A2 |  Shift + Audio / Lang I/II |  1 |  1 |
|  Sleep |  Sleep / Timer |  2 |  2 |
|  Aspect |  Shift + Picture / Format |  3 |  3 |
|  Media |  Shift + Display / Media |  4 |  4 |
|  Display |  Display / Media |  5 |  5 |
|  Auto |  Smart / List |  6 |  6 |
|  P.Mode |  Picture / Format |  7 |  7 |
|  S.Mode |  Sound / Title |  8 |  8 |
|  DTV |  D.Menu / Top |  9 |  9 |
|  Source |  AV / Input / RDS |  0 |  0 |
|  Up |  Up |  -/-- |  Shift + Guide / EPG / -/-- |
|  Left |  Left |  Recall |  Back / Return |
|  Enter |  OK |  CH+ |  CH+ / Page+ |
|  Right |  Right |  Info |  Info / Angle |
|  Down |  Down |  Audio |  Audio / Lang I/II |



