




 
 





 











 

 

 








 




 















 
 












Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Up		Up
	Power		Power
	Left		Left
	Menu		Menu / Home
	Right		Right
	OK/Select		OK
	Down		Down
	[i]/Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PP		Back / Return
	0		0
	-/--/Exit		Exit / Cancel / Clear
	P+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	Swap/P<P		Fav / Marker / PC
	I-II		Audio / Lang I/II
	Tv/DTV		TV/Radio /
	AV/Source		AV / Input / RDS
	Red/↑		Red / Netflix / Search
	Green/↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto





Original		Replacement		Original		Replacement	
	[≡o]		Sleep / Timer				
	[≡+]/[+]		Sound / Title				
	[≡x]/[■ ■]		Eject / Surround				
	[.≡]		Picture / Format				
	[≡◆]/[+]/Wide		Zoom / Size				
	[≡?]		Subtitle / EQ				
	[≡i]/Guide		Guide / EPG / -/--				

