



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Tv/Radio /
	0
	Back / Return
	Menu / Home
	Info / Angle
	CH+ / Page+

Original	Replacement
	Exit / Cancel / Clear
	Guide / EPG / -/-
	CH- / Page-
	Up
	Left
	Vol-
	OK
	Right
	Vol+
	Fav / Marker / PC
	Down
	Pause / Step / Freeze
	Smart / List
	AV / Input / RDS
	Setup / OPT /
	Picture / Format
	Audio / Lang I/II



