









 



 



 









 






 

 







 












 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	FAV		Fav / Marker / PC
	Internet		Smart / List
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Music/Movie/Pictu		Display / Media
	LIB		D.Menu / Top
	Vol+		Vol+
	Vol-		Vol-
	P+P		I<< / Preset-
	EPG		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Back		Back / Return
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Rec		Rec / Rec Mode
	Play		Play / Slow





Original		Replacement		Original		Replacement	
	Stop		Stop / Hold				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Text		Text / Goto				
	SUBT.		Subtitle / EQ				
	Audio		Audio / Lang I/II				
	OPT		Setup / OPT /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

