





 















Original	Replacement
Power	Power
TV / SAT	AV
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
SAT	Smart
Menu	Menu
FAV	+  Shift + Pre Ch
EPG	Guide

Original	Replacement
Recall	Pre Ch
Exit	Exit
Up	Up
Right	Right
Down	Down
Left	Left
OK	Ok
Vol +	Vol +
Vol -	Vol -
CH&Page +	Ch +
CH&Page -	Ch -
Red / TTX	Red
Red / TTX	Text
Green / SUB.T	Green
Green / SUB.T	Subt
Yellow / Zoom	Yellow
Yellow / Zoom	Eject





Original		Replacement		Original	Replacement
	Blue / MP		Blue		
	TV / Radio		TV/R		
	Audio		Dual		
	Pause		Pause		
	POS		Format		
	REC		Rec		
	PN		3D		
	Info		Info		
	T/S		Sleep		

