






 




 

 





 





Original	Replacement
 Standby/On	 Power
 DVD/CD	 Shift + 3
 DVD/CD	 Shift + 2
 Tuner (FM/AM)	 Shift + 6
 USB	 Shift + 8
 Line	 Shift + 1
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Playlist 1	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Playlist 2	 Green / APP / Repeat

Original	Replacement
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 7	 7
 8	 8
 9	 9
 Playlist 3	 Yellow / YouTube / Repeat
 Clear	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Extra PWR	 Picture / Format
 0	 0
 Top Menu	 D.Menu / Top
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Menu	 Smart / List
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-





Original	Replacement
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >> / Preset+
 Home Menu	 Menu / Home
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Return	 Back / Return
 Setup	 Setup / OPT /
 Test Tone	 Text / Goto
 Surround	 Shift + Eject / Surround
 Sound	 Sound / Title
 <</< <	 << / Tune-
 Play	 Play / Slow
 > > >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 >>	 >> / Preset+
 Power Tv Control	 Shift + Power
 CH+ Tv Control	 Shift + CH+ /
 Vol+ Tv Control	 Shift + Vol+
 Line Out	 AV / Input / RDS
 Input Tv Control	 Shift + AV / Input / RDS
 CH- Tv Control	 Shift + CH- /
 Vol- Tv Control	 Shift + Vol-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+

