







 



 
 


 
 

 
 



 



 



 



 


 
 


 
 
 


 
 


 
 


 
 


 



 







Original		Replacement		Original		Replacement	
	Power		Power		Blue / Title		Blue
	HDMI Control		Smart		1		1
	Rec		Rec		2		2
	Play		Play		3		3
	Pause		Pause		4		4
	Stop		Stop		5		5
	I<<		I<<		6		6
	<<		<<		7		7
	>>		>>		8		8
	>>I		>>I		9		9
	Screen		Format		0		0
	Lang		Dual		Text		Text
	Subtitle		Subt		Swap		Pre Ch
	PIP / World		3D		Up		Up
	Red / Zoom		Red		Right		Right
	Green / Repeat		Green		Down		Down
	Yellow / Root		Yellow		Left		Left





Original		Replacement		Original	Replacement
	OK		Ok		
	P/CH +		Ch +		
	P/CH -		Ch -		
	Mute		Mute		
	Vol +		Vol +		
	Vol -		Vol -		
	Menu		Menu		
	Source		AV		
	Return		Back		
	EPG		Guide		
	Info		Info		
	Sleep		Sleep		
	FAV		Shift + Pre Ch		
	Angle / Media		Media		
	Search Mode		TV/R		
	Display		Shift + Info		
	Presets		List		

