


 

 


 
 

 


 


 
 
 


 
 
 
 

 

 

 




Original	Replacement
 Power	 Power
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 *	 MENU
 Search	 TV/R
 [<>]	 PICTURE FORMAT
 TV Guide	 GUIDE
 List	 DISC NAV LIST
 Sources	 TIMER AV
 Smart Tv	 APP MEDIA
 Home	 HOME SMART
 Tv/Exit	 CLEAR EXIT
 Red	 A

Original	Replacement
 Green	 B
 Yellow	 C
 Blue	 D
 Info	 DISPLAY INFO
 Options	 SETTINGS OPT
 Back	 RETURN BACK
 Multiview	 ECO 3D
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 + VOL
 Vol-	 VOL -
 Mute	 MUTE
 CH+	 + CH
 CH-	 CH -





Original		Replacement		Original		Replacement	
1 . @	1	1	1				
2 ABC	2	2	2				
DEF 3	3	3	3				
4 GHI	4	4	4				
5 JKL	5	5	5				
MNO 6	6	6	6				
7 PQRS	7	7	7				
8 TUV	8	8	8				
WXYZ 9	9	9	9				
0 -	0	0	0				
SUBTITLE	Subtitle	AD SUBT	Subt				
TEXT	Text	REPEAT TEXT	Text				

