
 




 

 


 

 
 




 





 



 

 
 

 

 
 
 
 
 


 
 






 
















| Original | Replacement | Original | Replacement |
|---|------------------|---|---------------|
|  | Power |  | Power |
|  | Sleep / Auto Off |  | Sleep |
|  | Clock / Timer |  | AV |
|  | Play / Rec |  | Rec |
|  | Disc |  | Pre Ch |
|  | 1 / Disc 1 |  | 1 |
|  | 2 / Disc 2 |  | 2 |
|  | 3 / Disc 3 |  | 3 |
|  | 4 / Disc 4 |  | 4 |
|  | 5 / Disc 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | >≡ 10 |  | Guide |
|  | Del |  | Exit |
|  | Program |  | Shift + Sleep |
|  | Play Mode |  | Shift + Play |
|  | Music Port |  | Media |
|  | CD Play / Pause |  | Play |
|  | Tape Play |  | Green |
|  | USB Play / Pause |  | Yellow |
|  | FM / AM |  | Red |
|  | Stop / Clear |  | Stop |
|  | Vol - |  | Vol - |
|  | Vol + |  | Vol + |
|  | Album - |  | Left |
|  | Album + |  | Right |
|  | I<< / << / |  | I<< |
|  | I<< / << / |  | << |
|  | I<< / << / |  | Down |
|  | >>I / >> / Up |  | >>I |
|  | >>I / >> / Up |  | >> |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  >> / >> / Up |  Up | | |
|  Re-Master |  Smart | | |
|  Manual EQ |  Ch + | | |
|  D.Bass |  Dual | | |
|  Display - Dimmer |  Info | | |
|  Repeat |  Text | | |
|  Preset EQ |  Ch - | | |
|  Muting |  Mute | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

