





 

















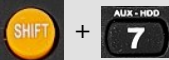



 
 





 
 

 


 






Original	Replacement	Original	Replacement
Power	Power	CD Stop	Stop / Hold
P.Scan	TV/Radio /	CD Repeat A-B	Yellow / YouTube / Repeat
1	1	CD Intro	Subtitle / EQ
2	2	Deck Sel A	Shift + CH+ /
3	3	Deck Play	Shift + Play /
4	4	Deck >>	Shift + >> /
5	5	Deck Pause	Shift + Pause / Step /
6	6	Deck Sel B	Shift + CH- /
7	7	Deck Rec	Shift + Rec / Rec Mode
8	8	Deck Play	Shift + I<< / Preset-
9	9	Deck <<<	Shift + <<< /
0	0	Deck Stop	Shift + Stop /
CD Disc	Eject / Surround	Equalizer Preset	Up
CD Play	Play / Slow	Equalizer User	Right
CD Pause	Pause / Step / Freeze	Equalizer File	Down
CD I<<<	I<<< / Preset-	Equalizer T.Mon	Left
CD >>>I	>>>I / Preset+	Equalizer Display	OK





Original		Replacement		Original		Replacement	
	Input Selector CD		Shift + 3		Master Down		Vol-
	Input Selector Tuner		Shift + 6		Display Sys		Display / Media
	Input Selector Video 1		Shift + 4		Sleep		Sleep / Timer
	Input Selector		Shift + 7		CH Level Down		CH- / Page-
	Input Selector Tape Mon.		Shift + 5		Mute		Mute / Dimmer
	Input Selector Video 2		Shift + 8				
	Stereo		Audio / Lang I/II				
	Input Selector 6 CH Direct		Shift + 1				
	Input Selector Video 3		Shift + 9				
	Auto		Smart / List				
	DSP Mode		Menu / Home				
	T.Tone		Text / Goto				
	CH Level Up		CH+ / Page+				
	CH Sel.		Info / Angle				
	Master Up		Vol+				
	D.Time		D.Menu / Top				
	Adjust		Setup / OPT /				

