


 


 







 

 

 





 





 

 

 

 





Original	Replacement
 Power	 Power
Home	 Shift + Menu /
 e/Energy/Savin	 Sleep / Timer
 Input	 AV / Input / RDS
 AV Mode	 Shift + AV / Input / RDS
 TV/RAD	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Replacement
 Vol+	 Vol+
 Q.View	 Display / Media
 FAV/Mark	 Fav / Marker / PC
 Vol-	 Vol-
 Ratio	 Picture / Format
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 P + / Page +	 CH+ / Page+
 Q.Menu	 D.Menu / Top
 P - / Page -	 CH- / Page-
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK
 Back	 Back / Return





Original		Replacement		Original	Replacement
	Info		Info / Angle		
	Exit		Exit / Cancel / Clear		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Text		Text / Goto		
	Subtitle		Subtitle / EQ		
	Stop		Stop / Hold		
	Play		Play / Slow		
	T.Opt		Setup / OPT /		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		
	AD		Audio / Lang I/II		

