



Original	Replacement	Original	Replacement
	Power		+ Shift + >>I / Preset+
	9		+ Shift + I<< / Preset-
	+ Shift + Power		Down
	Eject / Surround		CH- / Page-
	+ Shift + 9		+ Shift + Down
	3		Green / APP / Repeat
	8		Back / Return
	Up		Vol+
	CH+ / Page+		Stop / Hold
	+ Shift + Up		+ Shift + Stop /
	I<< / Preset-		Vol-
	+ Shift + Left		Blue / Prime Video / Random
	Left		AV / Input / RDS
	Play / Slow		Mute / Dimmer
	Pause / Step / Freeze		Display / Media
	+ Shift + Play /		+ Shift + Display / Media
	>>I / Preset+		TV/Radio /





Original	Replacement	Original	Replacement
 Prog USB/Audio In	 +  Shift + TV/Radio / Program		
 Sound	 Sound / Title		
 Clock	 +  Shift + Sleep / Timer		
 Sleep/Timer	 Sleep / Timer		

