



Original		Replacement		Original		Replacement	
	Standby		Power		Source / AV		AV
	TV / Radio		TV/R		Info		Info
	TV Guide		Guide		Up		Up
	Mute		Mute		Right		Right
	ATV		Shift + Smart		Down		Down
	USB		Media		Left		Left
	DVD		Smart		OK		Ok
	Eject		Eject		Menu		Menu
	Rec		Rec		Exit		Exit
	Rec List		Shift + Rec		1		1
	I<<		I<<		2		2
	>>I		>>I		3		3
	Stop		Stop		4		4
	<<		<<		5		5
	>>		>>		6		6
	Play / Pause		Play		7		7
	Play / Pause		Pause		8		8





Original	Replacement
	9
	0
	Back
	Pre Ch
	Vol +
	Vol -
	Subt
	Format
	Dual
	Sleep
	Ch +
	Ch -
	Red
	Green
	Yellow
	Blue
	Shift + Text

Original	Replacement
	D.Dis
	Shift + Eject
	3D
	Shift + Info
	Shift + Eject
	Shift + Power
	Text
	Options
	D. Menu
	List
	Shift + Pause

