

 

 











 











 

 

 



 


 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Auto	 Eject / Surround

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 FAV+	 Shift + Yellow / YouTube /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Repeat/FAV-	 Shift + Green / APP /
 CH-	 CH- / Page-
 Text	 Text / Goto





Original	Replacement
 <<	 << / Tune-
 >>/Hold	 >> / Tune+
 I<</Index	 I<< / Preset-
 >>I/Size	 >>I / Preset+
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop/Subpage	 Stop / Hold
 Zoom/Reveal	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Audio/Nicam	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode

Original	Replacement
 Subtitle	 Subtitle / EQ

