



| Original | Replacement | Original | Replacement |
|---|-------------|---|------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | Info |  | Info / Angle |
|  | DMP |  | D.Menu / Top |
|  | Up |  | Up |
|  | EPG |  | Guide / EPG / -/-- |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol + |  | Vol+ |
|  | List |  | Smart / List |
|  | CH + |  | CH+ / Page+ |
|  | Vol - |  | Vol- |
|  | CH - |  | CH- / Page- |
|  | Fav |  | Fav / Marker / PC |
|  | Sleep |  | Sleep / Timer |
|  | Index |  | Display / Media |
|  | Recall |  | Back / Return |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune- |





 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






| Original | | Replacement | | Original | Replacement |
|----------|-------------------|-------------|-------------------------------|----------|-------------|
| | Green / >> | | >> / Tune+ | | |
| | Green / >> | | Green / APP / Repeat | | |
| | Yellow / I<< | | I<< / Preset- | | |
| | Yellow / I<< | | Yellow / YouTube / Repeat | | |
| | Blue / >> | | Blue / Prime Video / Random | | |
| | Blue / >> | | >> / Preset+ | | |
| | Text / Play/Pause | | Text / Goto | | |
| | Text / Play/Pause | | Pause / Step / Freeze | | |
| | Text / Play/Pause | | Play / Slow | | |
| | Stop / Still | | Stop / Hold | | |
| | Timer / Subtitle | | Subtitle / EQ | | |
| | Size / Aspect | | Zoom / Size | | |
| | Cancel [=X] | + | Shift + Exit / Cancel / Clear | | |
| | Radio | | TV/Radio / | | |
| | Audio / I/II | | Audio / Lang I/II | | |
| | Rec | | Rec / Rec Mode | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |





| Original | Replacement | Original | Replacement |
|---|-------------|---|------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | [≡?]/Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | [≡i]/Info |  | Info / Angle |
|  | DMP |  | D.Menu / Top |
|  | Up |  | Up |
|  | EPG |  | Guide / EPG / -/-- |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | CH- |  | CH- / Page- |
|  | ♥ |  | Fav / Marker / PC |
|  | Sleep |  | Sleep / Timer |
|  | Index |  | Display / Media |
|  | Back |  | Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | << |  | << / Tune- |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  | Green  Green / APP / Repeat | | |
|  | >>  >> / Tune+ | | |
|  | Yellow  Yellow / YouTube / Repeat | | |
|  | I<<  I<< / Preset- | | |
|  | Blue  Blue / Prime Video / Random | | |
|  | >>I  >>I / Preset+ | | |
|  | Play  Play / Slow | | |
|  | Pause  Pause / Step / Freeze | | |
|  | [≡]  Text / Goto | | |
|  | Stop/Still  Stop / Hold | | |
|  | [≡+]  Picture / Format | | |
|  | [≡o]/Subtitle  Subtitle / EQ | | |
|  | [≡◆]/[+]  Zoom / Size | | |
|  | [≡x]  Setup / OPT / | | |
|  | Radio  TV/Radio / | | |
|  | Audio  Audio / Lang I/II | | |
|  | Rec  Rec / Rec Mode | | |

