


 

 

 

 







 

 



 







 



 
 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

 







 



 

 

 

 

 



 

















 

 







 

 

 





 
 








Original	Replacement	Original	Replacement
Green / >>	>> / Tune+		
Green / >>	Green / APP / Repeat		
Yellow / I<<	I<< / Preset-		
Yellow / I<<	Yellow / YouTube / Repeat		
Blue / >>	Blue / Prime Video / Random		
Blue / >>	>> / Preset+		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Pause / Step / Freeze		
Text / Play/Pause	Play / Slow		
Stop / Still	Stop / Hold		
Timer / Subtitle	Subtitle / EQ		
Size / Aspect	Zoom / Size		
Cancel [≡X]	+ Shift + Exit / Cancel / Clear		
Radio	TV/Radio /		
Audio / I/II	Audio / Lang I/II		
Rec	Rec / Rec Mode		





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	>>  >> / Tune+		
	Yellow  Yellow / YouTube / Repeat		
	I<<  I<< / Preset-		
	Blue  Blue / Prime Video / Random		
	>>I  >>I / Preset+		
	Play  Play / Slow		
	Pause  Pause / Step / Freeze		
	[≡]  Text / Goto		
	Stop/Still  Stop / Hold		
	[≡+]  Picture / Format		
	[≡o]/Subtitle  Subtitle / EQ		
	[≡◆]/[+]  Zoom / Size		
	[≡x]  Setup / OPT /		
	Radio  TV/Radio /		
	Audio  Audio / Lang I/II		
	Rec  Rec / Rec Mode		

