



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/[≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
 <</[≡i]	 << / Preset-
 >> /[≡?]	 >> / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 OI/II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 Up	 Up
 [→]	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+









 






 


 









 



 





 





 



 










 
 











Original	Replacement	Original	Replacement
 Home / Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		





Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause [/≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>> / Preset+		[→]		AV / Input / RDS
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	O)/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Fav / Marker / PC		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		YouTube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original		Replacement		Original		Replacement	
	Home/Source		Menu / Home				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	Q.Menu		D.Menu / Top				

