



Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Play	 Play / Slow	 6	 6
 Pause [/≡]	 Pause / Step / Freeze	 7	 7
 Stop/[≡+]	 Stop / Hold	 8	 8
 Rec/[≡◆]	 Rec / Rec Mode	 9	 9
 <</[≡o]	 << / Tune-	 *	 Setup / OPT /
 <</[≡i]	 << / Preset-	 0	 0
 >> /[≡?]	 >> / Preset+	 [→]	 Shift + Right
 >> /[≡x]	 >> / Tune+	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 O) /II/Audio	 Audio / Lang I/II	 OK	 OK
 [≡]	 Text / Goto	 Right	 Right
 ←/<x]	 Shift + Left	 Down	 Down
 1	 1	 Netflix	 Shift + Red / Netflix /
 2	 2	 YouTube	 Shift + Yellow / YouTube /
 3	 3	 Vol+	 Vol+

Original	Replacement	Original	Replacement
 4	 4	 VIDEO	 4
 5	 5	 TAPE	 5
 6	 6	 TUNER	 6
 7	 7	 AUX - MOD	 7
 8	 8	 USB	 8
 9	 9	 BLUETOOTH	 9
 *	 Setup / OPT /	 HDMI - BAT	 0
 0	 0	 SHIFT + 	 Shift + Right
 [→]	 SHIFT + 	 Up	 Up
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 OK	 OK	 Right	 Right
 Right	 Right	 Down	 Down
 Down	 Down	 NETFLIX	 SHIFT +  Shift + Red / Netflix /
 Netflix	 SHIFT + 	 YouTube	 SHIFT +  Shift + Yellow / YouTube /
 YouTube	 SHIFT + 	 Vol+	 Vol+
 Vol+	 Vol+		























Original	Replacement	Original	Replacement
 Home/Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		













 

 



Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Play	 Play / Slow	 6	 6
 Pause/[≡]	 Pause / Step / Freeze	 7	 7
 Stop/[≡+]	 Stop / Hold	 8	 8
 Rec/[≡◆]	 Rec / Rec Mode	 9	 9
 <</[≡o]	 << / Tune-	 *	 Setup / OPT /
 <</[≡i]	 << / Preset-	 0	 0
 >> /[≡?]	 >> / Preset+	 [→]	 Shift + Right
 >> /[≡x]	 >> / Tune+	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 OI/II/Audio	 Audio / Lang I/II	 OK	 OK
 [≡]	 Text / Goto	 Right	 Right
 ←/<x]	 Shift + Left	 Down	 Down
 1	 1	 Netflix	 Shift + Red / Netflix /
 2	 2	 You Tube	 Shift + Yellow / YouTube /
 3	 3	 Vol+	 Vol+

Original	Replacement	Original	Replacement
 4	 4	 VIDEO	 4
 5	 5	 TAPE	 5
 6	 6	 TUNER	 6
 7	 7	 AUX - MOD	 7
 8	 8	 USB	 8
 9	 9	 BLUETOOTH	 9
 *	 Setup / OPT /	 HDMI - BAT	 0
 0	 0	 SHIFT + 	 Shift + Right
 Up	 Up	 Left	 Left
Left	Left	OK	OK
Right	Right	Down	Down
Down	Down	Netflix	Shift + Red / Netflix /
Netflix	Shift + Red / Netflix /	You Tube	Shift + Yellow / YouTube /
You Tube	Shift + Yellow / YouTube /	Vol+	Vol+
Vol+	Vol+		





Original	Replacement	Original	Replacement
 Home / Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		

Original	Replacement

