



Original	Replacement
Power	Power
Direct Tv Rec	Shift + Rec / Rec Mode
Tv Aspect/AV Link	Picture / Format
Tv/Text	Text / Goto
1	1
2	2
3	3
Tracking/V-Lock+	CH+ / Page+
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+
AV/Input Select	AV / Input / RDS

Original	Replacement
0	0
-/--	Guide / EPG / -/--
Vol-	Vol-
Library/Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
ShowView	Info / Angle
Still Album	Smart / List
Replay	Back / Return
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Up	Up
Play	Play / Slow
Exit	Exit / Cancel / Clear
Left	Left
<<	<< / Tune-





Original	Replacement
	OK
	Right
	>> / Tune+
	Down
	Stop / Hold
	+ Shift + Up
	+ Shift + Right
	+ Shift + Vol+
	+ Shift + CH+ /
	+ Shift + Down
	+ Shift + Left
	+ Shift + Vol-
	+ Shift + CH- /
	Prog./Check TV/ Radio /
	+ Shift + Exit / Cancel / Clear
	SP/LP/EP Setup / OPT /
	Timer Sleep / Timer

Original	Replacement
	+ Shift + Sleep / Timer
	+ Audio / Lang I/II
	Display / Media
	Green / APP / Repeat





Original	Replacement
Power	Power
Tv Aspect/AV Link	Picture / Format
Tv/Text	Text / Goto
1	1
2	2
3	3
Tracking/V.Lock+	CH+ / Page+
4	4
5	5
6	6
Tracking/V.Lock-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+
AV/Input Select	AV / Input / RDS
0	0

Original	Replacement
Guide / EPG / -/--	Guide / EPG / -/--
Vol-	Vol-
Prog./Check Up	Up
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Date+	Right
Yellow	Yellow / YouTube / Repeat
On+	Shift + Vol+
Blue	Blue / Prime Video / Random
Off+	Shift + CH+ /
Prog./Check Down	Down
Date-	Left
On-	Shift + Vol-
Off-	Shift + CH- /

