



 
 






 
 
 
 
 

 
 
 
 


 

 
 
 



 



 
 


 
 

 

 

 
 
 

 
 

 

 




 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 DUAL	 SUBT	 OPT	 ECHO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 DISPLAY INFO	 MENU	 OK
 EXIT	 RETURN BACK	 CLEAR	 HOME
 VOL +	 SMART	 APP	 MEDIA
 1	 2	 3	 4
 4	 5	 6	 7
 7	 8	 9	 0
 GUIDE	 FAV	 PRE-CH	 A
 A	 B	 C	 D
			
<a href="http://www.mandis.tv">www.mandis.tv</a>			


 


 
 

 
 

 
 




 
 
 


 

 
 

 





 





Original		Replacement		Original		Replacement	
	QV		Options		Size		Format
	FAV		Pre Ch		Prog / Mix		Smart
	Source		AV		Prog / Mix		Shift + Sleep
	Sleep		Sleep		Return / SUBPG		Back
	Picture		Shift + Format		Repeat / Reveal		Shift + Back
	Sound		Shift + Dual		Search / Hold		TV/R
	Display		Info				
	I/II / Top		Dual				
	FAV - / REV		<<				
	FAV + / FWD		>>				
	USR/CR / Text		Media				
	USR/CR / Text		Text				
	Play/Pause / Index		Play				
	Play/Pause / Index		Shift + Info				
	Play/Pause / Index		Pause				
	Stop / Cancel		Stop				
	Stop / Cancel		Shift + Exit				





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

