 





Original	Replacement
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/-$	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back






 



 








 


 
 

 


 
 








Original	Replacement
	Up
	Down
	Right
	Left
	OK
	Vol +
	Vol -
	Mute
	Options
	Subt
	List
	Red
	Green
	Yellow
	Smart
	Format
	Eject

Original	Replacement
	Blue
	Dual




 




Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10 / -/-	 GUIDE		
 TV/AV	 AV		
 CH+	 CH +		
 CH-	 CH -		
 Tv Vol+	 Vol +		
 Tv Vol-	 Vol -		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/--$	 Guide
 SKIP >>	 >>
 SKIP  <<	  <<
 SLOW/S <<	 <<
 V/SEARCH >>	 >>
 Pause	 Pause

Original	Replacement
 Play	 Play
 Stop	 Stop

