








































 


































| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Shift + Guide / EPG / -/-- |
|  0 |  0 |
|  Recall |  Back / Return |
|  Vol + |  Vol+ |
|  Aspect |  Shift + Picture / Format |
|  Nicam |  Audio / Lang I/II |

| Original | Replacement |
|---|--|
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Input |  AV / Input / RDS |
|  CH - |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  PMode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |
|  FAV |  Fav / Marker / PC |
|  FAV - |  Shift + Down |





| Original | Replacement |
|--|---|
|  FAV + |  Shift + Up |
|  EPG |  Guide / EPG / -/-- |
|  Text |  Text / Goto |
|  Hold |  Shift + Stop / |
|  Lang |  Shift + Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Index / <<< |  <<< / Tune- |
|  Index / <<< |  Info / Angle |
|  Size / >>> |  >>> / Tune+ |
|  Size / >>> |  Zoom / Size |
|  Reveal / I<<< |  I<<< / Preset- |
|  Subpage / >>>I |  >>>I / Preset+ |
|  Subpage / >>>I |  Eject / Surround |
|  Rec |  Rec / Rec Mode |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |

| Original | Replacement |
|--|---|
|  Media |  Shift + Display / Media |
|  Red / TV/Radio |  TV/Radio / |
|  Red / TV/Radio |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |

