



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV / R	TV/Radio /
Home	D.Menu / Top
FAV	Fav / Marker / PC
Back	Back / Return
Audio	Audio / Lang I/II

Original	Replacement
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Vol +	Vol+
Vol -	Vol-
P +	Shift + CH+ /
List	Smart / List
P -	Shift + CH- /
CH +	CH+ / Page+
USB	Shift + 8
Text	Text / Goto





Original	Replacement	Original	Replacement
	CH -		CH- / Page-
	SUB		Subtitle / EQ
	Aspect		Picture / Format
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

