

 





 

 



 








 





Original	Replacement
 Power	 Power
 Mode DVB	 TV/R
 Direct TV Rec	 Rec
 Guide	 Guide
 TV / AV	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text

Original	Replacement
 STTL / FP	 Subt
 Index	 Shift + Info
 Hold	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 C	 Back
 i	 Info
 CH +	 Ch +
 CH -	 Ch -





Original	Replacement	Original	Replacement
Vol +	Vol +		
Vol -	Vol -		
Aspect	Format		
N	Smart		
Mute	Mute		
DVD Power	Shift + Power		
DVD Rec	Shift + Rec		
DVD Programme -	Shift + Ch -		
DVD Programme +	Shift + Ch +		
DVD << / I<<	<<		
DVD << / I<<	I<<		
DVD >> / >>I	>>		
DVD >> / >>I	>>I		
DVD Stop	Stop		
DVD Pause / Step	Pause		
DVD Play	Play		

Original	Replacement





Original		Replacement	
----------	--	-------------	--

	VCR Power		Power
	VCR Rec		Rec
	VCR		Ch -
	VCR		Ch +
	VCR << / I<<		<<
	VCR << / I<<		I<<
	VCR >> / >>I		>>
	VCR >> / >>I		>>I
	VCR Stop		Stop
	VCR Pause / Step		Pause
	VCR Play		Play

Original		Replacement	
----------	--	-------------	--

