



Original	Replacement
 Power	 Power
 Eject	 Eject
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 TV/TXT /	 Shift + Text
 TV/TXT /	 List
 Cancel / Zoom	 Shift + Exit
 Reveal / Subtitle	 Shift + Subt
 Hold / Menu	 Shift + Stop
 Hold / Menu	 D. Menu
 Size / Angle	 3D
 Subpage / Title	 Shift + List

Original	Replacement
 Index / Goto	 Info
 Red / Program	 Red
 Green / Slow	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue
 CH +	 Ch +
 CH -	 Ch -
 Sys-Menu	 Menu
 Input	 AV
 Vol +	 Vol +
 Vol -	 Vol -
 DVD	 Media
 DVD-Setup	 Options
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Original	Replacement	Original	Replacement
	Down		Down
	DVB		Smart
	Sys-Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Picture		Shift + Format
	Sound		Shift + Dual

Original	Replacement	Original	Replacement
	Nicam / A2		Shift + Mute
	Mute		Mute
	Sleep		Sleep
	TV / Radio		TV/R
	FAV		Pre Ch
	Fav +		Shift + Right
	Fav -		Shift + Left
	Pic. Format		Format
	Subtitle		Subt
	Text		Text
	Display		Shift + Info
	Language		Dual
	EPG		Guide

