



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Red / F1 |  Red / Netflix / Search |
|  Green / F2 |  Green / APP / Repeat |
|  Yellow / F3 |  Yellow / YouTube / Repeat |
|  Blue / F4 |  Blue / Prime Video / Random |
|  <<< |  <<< / Tune- |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  >>> |  >>> / Tune+ |
|  V.Format |  Picture / Format |
|  Resolution |  Zoom / Size |
|  Subtitle |  Subtitle / EQ |
|  Rec |  Rec / Rec Mode |
|  Option |  Setup / OPT / |
|  Audio |  Audio / Lang I/II |

| Original | Replacement |
|--|---|
|  Text |  Text / Goto |
|  SAT |  Shift + 0 |
|  Info |  Info / Angle |
|  Recall |  Back / Return |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Vol + |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  Page + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  EPG |  Guide / EPG / -/- |
|  Page - |  CH- / Page- |





| Original | | Replacement | | Original | | Replacement | |
|----------|------------|------------------|---------------|----------|--|-------------|--|
| 1 | 1 | TV 1 | 1 | | | | |
| 2 | 2 | DVD 2 | 2 | | | | |
| 3 | 3 | CD - STB 3 | 3 | | | | |
| 4 | 4 | VIDEO 4 | 4 | | | | |
| 5 | 5 | TAPE 5 | 5 | | | | |
| 6 | 6 | TUNER 6 | 6 | | | | |
| 7 | 7 | AUX - HDD 7 | 7 | | | | |
| 8 | 8 | USB 8 | 8 | | | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | | | |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer | | | | |
| 0 | 0 | HDMI - SAT 0 | 0 | | | | |
| TV/RADIO | TV / Radio | PROGRAM TV/RADIO | TV/Radio / | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Red / F1 |  Red / Netflix / Search |
|  Green / F2 |  Green / APP / Repeat |
|  Yellow / F3 |  Yellow / YouTube / Repeat |
|  Blue / F4 |  Blue / Prime Video / Random |
|  << |  << / Tune- |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  >> |  >> / Tune+ |
|  V-Format |  Picture / Format |
|  Resolution |  Zoom / Size |
|  Subtitle |  Subtitle / EQ |
|  Rec |  Rec / Rec Mode |
|  Option |  Setup / OPT / |
|  Audio |  Audio / Lang I/II |

| Original | Replacement |
|---|---|
|  Text |  Text / Goto |
|  SAT |  Shift + 0 |
|  Info |  Info / Angle |
|  Recall |  Back / Return |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  Page+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  EPG |  Guide / EPG / -/- |
|  Page- |  CH- / Page- |





| Original | Replacement |
|----------|-----------------------------|
| 1 | TV 1 |
| 2 | DVD 2 |
| 3 | CD - STB 3 |
| 4 | VIDEO 4 |
| 5 | TAPE 5 |
| 6 | TUNER 6 |
| 7 | AUX - HDD 7 |
| 8 | USB 8 |
| 9 | BLUETOOTH 9 |
| SLEEP | TIMER SLEEP Sleep / Timer |
| 0 | HDMI - SAT 0 |
| TV/RADIO | PROGRAM TV/RADIO TV/Radio / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

