





 







 














 














 



 



 





 

 









 

 











| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Power              |  Power              |  Pause / Still     |  Pause / Step / Freeze    |
|  1                  |  1                  |  Left / << / l<<   |  Left                     |
|  2                  |  2                  |  Left / << / l<<   |  << / Tune-               |
|  3                  |  3                  |  Left / << / l<<   |  l<< / Preset-            |
|  4                  |  4                  |  Right / >> / >>l  |  Right                    |
|  5                  |  5                  |  Right / >> / >>l  |  >>l / Preset+            |
|  6                  |  6                  |  Right / >> / >>l  |  >> / Tune+               |
|  7                  |  7                  |  Down / Stop       |  Down                     |
|  8                  |  8                  |  Down / Stop       |  Stop / Hold              |
|  9                  |  9                  |  Enter             |  OK                       |
|  0 / AV            |  0                 |  Index            |  Info / Angle            |
|  0 / AV           |  AV / Input / RDS |  Cancel          |  Exit / Cancel / Clear  |
|  CH/TR. -         |  CH- / Page-      |  Menu            |  Menu / Home            |
|  CH/TR. +         |  CH+ / Page+      |  Timer Rec       |  Sleep / Timer          |
|  Rec / OTR        |  Rec / Rec Mode   |  Program         |  TV/Radio /             |
|  Up / Play / Slow |  Up               |  Call            |  D.Menu / Top           |
|  Up / Play / Slow |  Play / Slow      |  Clock / Counter |  Red / Netflix / Search |

| Original   | Replacement  | Original   | Replacement  |
|--|--|--|--|
|  Power              |  Power              |  Pause / Still      |  Pause / Step / Freeze    |
|  1                  |  1                  |  Left / << / l<<    |  Left                     |
|  2                  |  2                  |  Left / << / l<<    |  << / Tune-               |
|  3                  |  3                  |  Left / << / l<<    |  l<< / Preset-            |
|  4                  |  4                  |  Right / >> / >>l   |  Right                    |
|  5                 |  5                 |  Right / >> / >>l |  >>l / Preset+          |
|  6                |  6                |  Right / >> / >>l |  >> / Tune+             |
|  7                |  7                |  Down / Stop      |  Down                   |
|  8                |  8                |  Down / Stop      |  Stop / Hold            |
|  9                |  9                |  Enter            |  OK                     |
|  0 / AV           |  0                |  Index            |  Info / Angle           |
|  0 / AV           |  AV / Input / RDS |  Cancel           |  Exit / Cancel / Clear  |
|  CH/TR. -         |  CH- / Page-      |  Menu             |  Menu / Home            |
|  CH/TR. +         |  CH+ / Page+      |  Timer Rec        |  Sleep / Timer          |
|  Rec / OTR        |  Rec / Rec Mode   |  Program          |  TV/Radio /             |
|  Up / Play / Slow |  Up               |  Call             |  D.Menu / Top           |
|  Up / Play / Slow |  Play / Slow      |  Clock / Counter  |  Red / Netflix / Search |





| Original  | Replacement   |
|---|---|
|  Counter Reset |  Green / APP / Repeat      |
|  Zero / Return |  Yellow / YouTube / Repeat |
|  Zero / Return |  Back / Return             |
|  Speed SP/LP   |  Display / Media           |
|  TV / VCR      |  Smart / List              |
|  Audio Select  |  Audio / Lang I/II         |
|  Eject         |  Eject / Surround          |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

