



| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  VHS Power |  Power |  9 |  9 |
|  Audio |  Dual |  0 |  0 |
|  TV Power |  Shift + Power |  -/-- / ≥10 |  Guide |
|  TV AV |  Shift + AV |  Cancel / Reset |  Exit |
|  TV CH + |  Shift + Ch + |  CH + / Tracking/V-Lock + |  Ch + |
|  TV CH - |  Shift + Ch - |  CH - / Tracking/V-Lock - |  Ch - |
|  TV Volume + |  Vol + |  Input |  Media |
|  TV Volume - |  Vol - |  Repeat |  Text |
|  Operation Select VHS |  Smart |  I<< Index/Skip |  I<< |
|  1 |  1 |  >>I Index/Skip |  >>I |
|  2 |  2 |  << REW |  << |
|  3 |  3 |  >> FF |  >> |
|  4 |  4 |  Stop |  Stop |
|  5 |  5 |  Pause / Slow |  Pause |
|  6 |  6 |  Play |  Play |
|  7 |  7 |  Menu / Play List |  Menu |
|  8 |  8 |  Menu / Play List |  List |





| Original | | Replacement | | Original | | Replacement | |
|---|----------------------|---|---------------|---|-----------------------------|---|--------------|
|  | DVD Power |  | Power |  | 9 |  | 9 |
|  | Audio |  | Dual |  | 0 |  | 0 |
|  | TV Power |  | Shift + Power |  | -/-- / ≥10 |  | Guide |
|  | TV AV |  | Shift + AV |  | Cancel / Reset |  | Exit |
|  | TV CH + |  | Shift + Ch + |  | Repeat |  | Text |
|  | TV CH - |  | Shift + Ch - |  | I<< Index/Skip |  | I<< |
|  | TV Volume + |  | Vol + |  | >>I Index/Skip |  | >>I |
|  | TV Volume - |  | Vol - |  | << REW |  | << |
|  | Operation Select DVD |  | Smart |  | >> FF |  | >> |
|  | 1 |  | 1 |  | Stop |  | Stop |
|  | 2 |  | 2 |  | Pause / Slow |  | Pause |
|  | 3 |  | 3 |  | Play |  | Play |
|  | 4 |  | 4 |  | Direct Navigator / Top Menu |  | Shift + Menu |
|  | 5 |  | 5 |  | Direct Navigator / Top Menu |  | D. Menu |
|  | 6 |  | 6 |  | Menu / Play List |  | Menu |
|  | 7 |  | 7 |  | Up |  | Up |
|  | 8 |  | 8 |  | Left |  | Left |





| Original | Replacement | Original | Replacement |
|----------|------------------|----------|-----------------|
| | Enter | | Ok |
| | Right | | Right |
| | Down | | Down |
| | Functions | | Options |
| | Return / Exit | | Back |
| | Setup | + | Shift + Options |
| | DVD-RAM | | Format |
| | DVD Status | | Info |
| | A / Quick OSD | | Red |
| | B / Quick Replay | | Green |
| | Manual Skip | | 3D |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

