



Original	Replacement
On / Off	Power
Mute	Mute / Dimmer
CD / DVD	Shift + 3
FM / AM	TV/Radio /
Tape	Shift + 5
TV	Shift + 1
VCR	Shift + 4
AUX	Shift + 7
DVD Menu	D.Menu / Top
Exit	Exit / Cancel / Clear
Settings	Setup / OPT /
Up / Tune +	Up
Left / Seek -	Left
Enter	OK
Right / Seek +	Right
Down / Tune -	Shift + Down
Down / Tune -	Down

Original	Replacement
Ch./Chap./Preset/Track +	CH+ / Page+
Volume +	Vol+
Ch./Chap./Preset/Track -	CH- / Page-
Volume -	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow






Original	Replacement
<<	<< / Tune-
<<	+ Shift + << /
>>	>> / Tune+
	Blue / Prime Video / Random
	Green / APP / Repeat
	Audio / Lang I/II
	+ Shift + Vol-
	+ Shift + Vol+

Original	Replacement





Original	Replacement
 On / Off	 Power
 Mute	 Mute / Dimmer
 CD / DVD	 Shift + 3
 FM / AM	 TV/Radio /
 Tape	 Shift + 5
 TV	 Shift + 1
 VCR	 Shift + 4
 AUX	 Shift + 7
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Settings	 Setup / OPT /
 Up / Tune +	 Up
 Left / Seek -	 Left
 Enter	 OK
 Right / Seek +	 Right
 Down / Tune -	 Down
 Ch./Chap./Preset/Track +	 CH+ / Page+

Original	Replacement
 Volume +	 Vol+
 Ch./Chap./Preset/Track -	 CH- / Page-
 Volume -	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-





Original	Replacement
<<	+ Shift + << /
>>	>> / Tune+
>>	+ Shift + >> /
	Blue / Prime Video / Random
	Green / APP / Repeat
	Audio / Lang I/II
	+ Shift + Vol-
	+ Shift + Vol+

Original	Replacement

