 


 




 

 

 
 


 



 
 
 

 



 



 
 
 





 
 






 
 

 
 
 














 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Play		Play
	Library		Smart		Stop		Stop
	Mute		Mute		Pause		Pause
	1		1		>>		>>
	2		2		>		>>
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		Guide		Guide
	Rec		Rec		Menu		Menu
	Last		Pre Ch		Prog +		Ch +
	I<		I<<		Prog -		Ch -
	<<		<<		Back		Back





Original		Replacement		Original		Replacement	
	Info		Info				
	Text		Text				
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	AD	 + 	Shift + Subt				
	Subt		Subt				
	Audio		Dual				
	A/V		AV				
	HDMI		Media				
	Wide		Format				

