






 




 




 
 
 

 



 

 





 




 


 

 



 



 

 

 



 












Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Pre Ch
 Source	 AV	 Exit	 Exit
 Sleep	 Sleep	 Up	 Up
 Picture Mode	 Options	 Left	 Left
 Sound Mode	 Dual	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 EPG	 Guide
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 Audio	 Shift + Dual
 8	 8	 Mute	 Mute
 9	 9	 P +	 Ch +
 0	 0	 P -	 Ch -
 FAV +	 Shift + Up	 Red	 Red
 FAV -	 Shift + Down	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow	 [≡ i]	 Media
 Blue	 Blue		
 I<<	 I<<		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 >>I	 >>I		
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 Rec	 Rec		
 Display	 Info		
 [...]	 Subt		
 [≡ ↓]	 3D		
 [≡ ●]	 Shift + Subt		
 [≡ □]	 Shift + Stop		
 [≡]	 Text		
 [?]	 Smart		

