



Original	Replacement	Original	Replacement
	Power		Mute / Dimmer
	1		CH- / Page-
	2		Menu / Home
	3		Exit / Cancel / Clear
	4		Up
	5		Left
	6		OK
	7		Right
	8		Guide / Top
	9		Down
	Recall		Tv/FAV/Radio/Set
	0		Tv/FAV/Radio/Set
	Source		Red / Netflix / Search
	Vol+		Green / APP / Repeat
	A/D/Content Menu		Yellow / YouTube / Repeat
	P+		Blue / Prime Video / Random
	Vol-		Picture / Format











 

 

 



 











 























 




 












Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		Setup / OPT /
	[<>]		Picture / Format
	<[]>		Display / Media
	[i+]/[≐i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O/I/II		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≐o]		Play / Slow





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	[<>]		Picture / Format				
	<[/]>		Display / Media				
	[i+]/[≡i]		Info / Angle				
	Text		Text / Goto				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Eject		Eject / Surround				
	O)/II		Shift + Audio / Lang I/II				
	Stop		Stop / Hold				
	Play/[≡o]		Play / Slow				
	II/II>/[▼]		Pause / Step / Freeze				
	I<</[≡?]		I<< / Preset-				
	<</[≡+]		<< / Tune-				
	>>/[≡◇]		>> / Tune+				
	>>I/[O]/[≡X]		>>I / Preset+				

