
 











 







 
 




 

 




	Original	Replacement		Original	Replacement
	Power		Power		S.Mode
	Mute		Mute		Shift + Dual
	1		1		Source
	2		2		AV
	3		3		Prog+
	4		4		Prog-
	5		5		Exit
	6		6		Menu
	7		7		Up
	8		8		Down
	9		9		Right
	0		0		Left
	PR.List		List		Ok
	Recall		Back		Eject
	Vol+		Vol +		Sleep
	Vol-		Vol -		Media
	Pic Mode		Shift + Format		Smart
			Red		Red
			Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	FAV		Pre Ch		
	Tv/Radio		TV/R		
	Audio		Dual		
	Subtitle		Subt		
	Size		Format		
	Reveal		Options		
	EPG		Guide		
	Info		Info		
	Text		Text		
	Index		D. Menu		
	Subpage		Shift + Subt		
	Hold		3D		

