



Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Vol+	 Vol+
 9	 9	 FAV	 Fav / Marker / PC
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 P.Mode	 Picture / Format
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 S.Mode	 Sound / Title
 Aspect	 Zoom / Size	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green / APP / Repeat		Rec / Rec Mode
	Yellow / YouTube / Repeat		Shift + Red / Netflix /
	Blue / Prime Video / Random		Shift + Yellow / YouTube /
	Shift + Home / Menu /		
	Setup / OPT /		
	Display / Media		
	Guide / EPG / -/--		
	Text / Goto		
	Stop / Hold		
	Play / Slow		
	Pause / Step / Freeze		
	Smart / List		
	<< / Tune-		
	>> / Tune+		
	I<< / Preset-		
	>>I / Preset+		
	Subtitle / EQ		

