 


 




 
 

 


 
 




 
 

 



 









 

 





 





Original		Replacement		Original		Replacement	
	Standby		Power		Tv/Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		CH+		Ch +
	0		0		CH-		Ch -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		Media		Media
	Audio		Dual		USB		Smart
	Subtitle		Subt		Record		Rec





Original		Replacement		Original		Replacement	
	Stop		Stop				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

