


 


 

 
 



 

 

 



 



 



 



 



 

 



 

 
 




 

 

 

 



 



 

 




Original	Replacement	Original	Replacement
 Power	 Power	 ATV/DTV	 TV/R
 Input	 AV	 Vol+	 Vol +
 [TV]	 Media	 Vol-	 Vol -
 Text	 Text	 [≡i]/[i+]	 List
 Subtitle	 Subt	 Mute	 Mute
 O)/I/II	 Dual	 Quick	 Smart
 1	 1	 P+	 Ch +
 2	 2	 P-	 Ch -
 3	 3	 Guide	 Guide
 4	 4	 Exit	 Exit
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 0	 0	 Menu	 Menu
 Recall	 Pre Ch	 Return	 Back





Original		Replacement		Original		Replacement	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[≡?]		Eject				
	[≡□]		D. Menu				
	[≡⇕]		Format				
	[⊖] / [≡X]		Sleep				

